BNC
Scan
Rate

Scan (ON = DOWN, OFF = UP)
Scan Direction Jumper in Remote
Control (ON = MANUAL, OFF = SCAN)

Speed (ON = HIGH, OFF = LOW)

Direction (ON = UP, OFF = DOWN)

Micro Stepping

Motor Driver Fault

Lower Limit Switch

Upper Limit Switch

3.3V Power Supply

24V Power Supply

PJ45
RB45
Remote

Remote

BNC Scan← Rate	Scan (ON = DOWN, OFF = UP) Scan Direction Jumper in Remote Control (ON = MANUAL, OFF = SCAN) Speed (ON = HIGH, OFF = LOW) Direction (ON = UP, OFF = DOWN) Micro Stepping Motor Driver Fault Lower Limit Switch Upper Limit Switch
	3.3V Power Supply
	24Y Power Supply
24V @1A Cent+	RJ45 • Remote