



STEP_SPEC.PCB
4/8/16
Updated 10/3/16

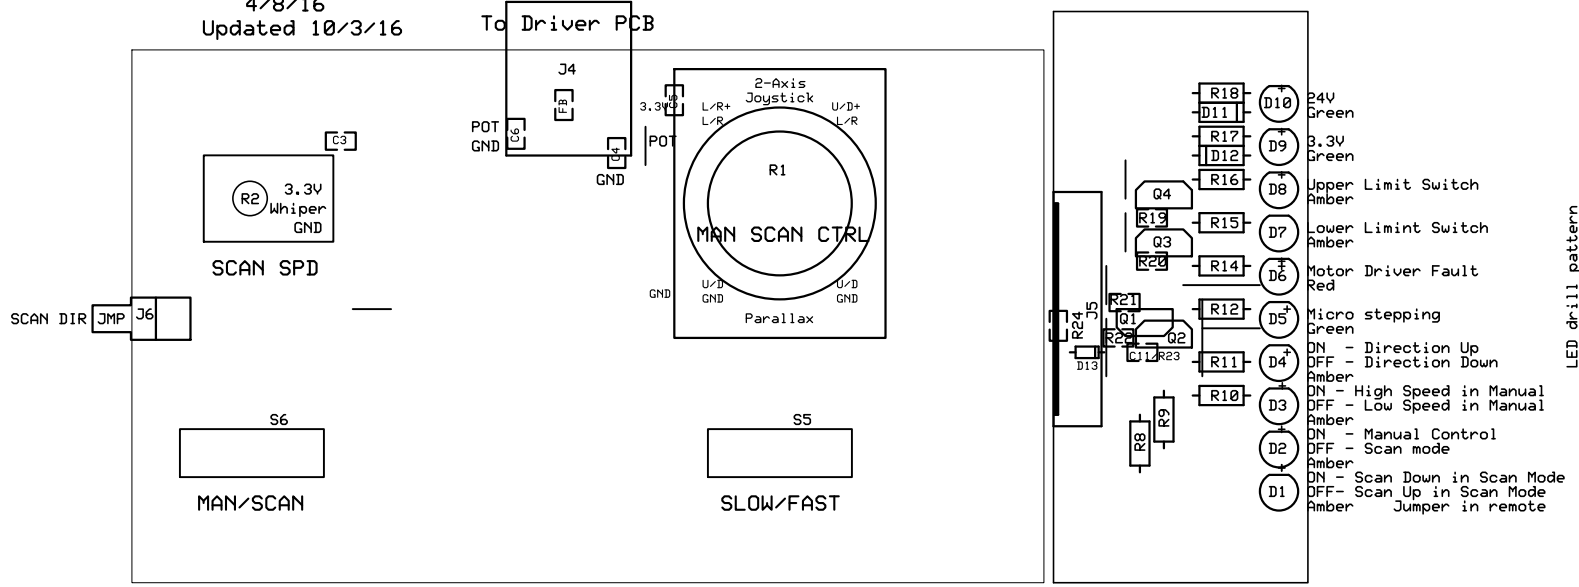

Trim PCB before soldering RJ45 & power
To remote PCB

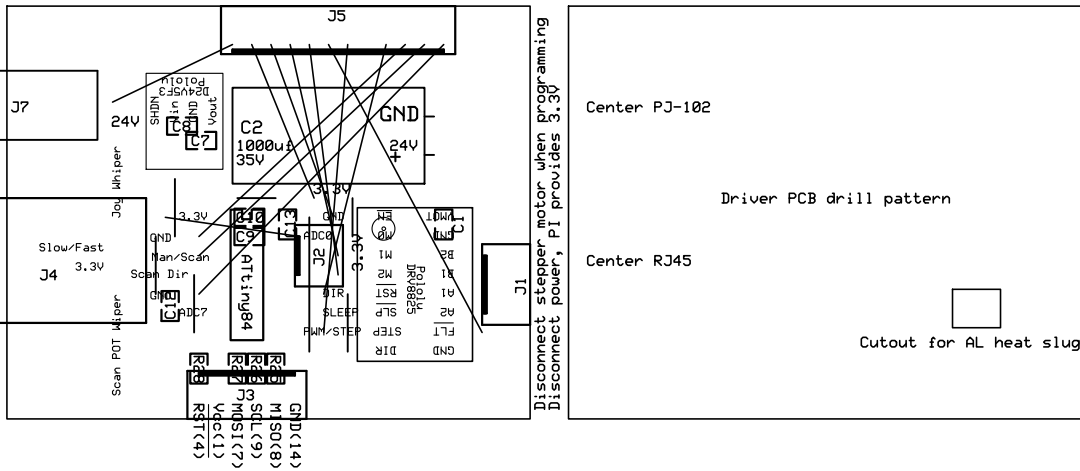

Disconnect stepper motor when programming
Disconnect power, PI provides 3.3V